



PERFORMANCE LIGHTING

Item: H.I.D. 7" – 205mm 12V 35W
Version: 1.0
Date: April 2009

H.I.D. INSTALLATION INSTRUCTIONS

I IMPORTANT

DO NOT TOUCH BULBS OR MIRRORED SURFACES. H i

This will result in contamination and can cause corrosion, discoloration and cracking. These are not covered by warranty. Wear clean cotton gloves and eye protection, clean any marks with a clean cloth and alcohol. Do not use solvents or degreaser of any kind.

✂ BULB / REFLECTOR REPLACEMENT

REMOVE THE LAMP FROM THE VEHICLE AND PERFORM REPAIRS ON A CLEAN FLAT SURFACE COVERED WITH A SOFT TOWEL OR BLANKET.

Disassemble the lamp by loosening the star screws. Take care to observe the position of the holes in relation to the lamp and make careful note of the silicone seal seating position. Unplug the bulb from the ballast. Un-clip the bulb retaining spring and carefully rotate / remove the spring. (Note: Do not bend the spring).



Re-assemble making sure all parts are clean and seal is correctly fitted.

✂ INSTALLATION

I Make sure of 12V supply and correct polarity. (+) Red and (-) Black (Reverse connection will damage the ballast and void warranty). ABR-SIDEWINDER wiring harnesses are available as an optional accessory and include wiring instructions.

Mount the lamp on a flat surface that supports the full base of the lamp. Lamp can be rotated through 90 degrees and adjusted accordingly. Tighten the mounting nut to a max torque of 40 ft/lbs. DO NOT OVER TIGHTEN.

Warranty: This product is covered by a 12 month warranty. Excludes bulbs, reverse connection, impact damage, water ingress, damage from misuse or modification. Return the product with a copy of the original invoice and detailed description of the problem to original place of purchase.



ABR - SIDEWINDER
P.O. Box 4065, Gumdale, QLD, 4154
www.sidewinder.com.au

(07) 3890 5899

Email: info@sidewinder.com.au